


**SPI Bus Interface Connector  
CN6  
(located near serial port 1)**

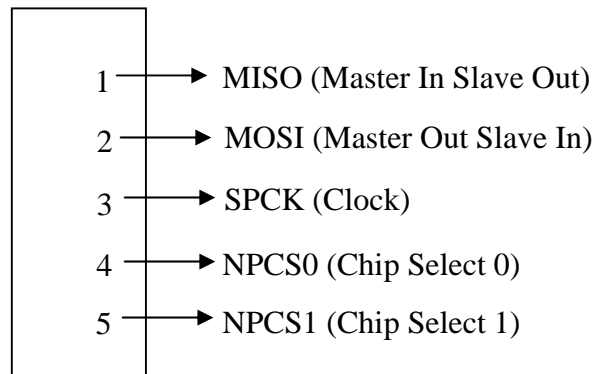

To enable SPI:   
Under folder /dev   
  
type "mknod spi0 c 153 0" to add device spi0   
and/or   
type "mknod spi1 c 153 1" to add device spi1   
Check that spi0 and/or spi1 had been added to folder /dev